


# Moso® Tile Pandaflex / Zenflex

## Product

The MOSO bamboo tiles "Panda-Flex" and "Zen-Flex" consist of bamboo strips which are pressed onto a water resistant latex backing. The size of the tiles is 50x50 cm.

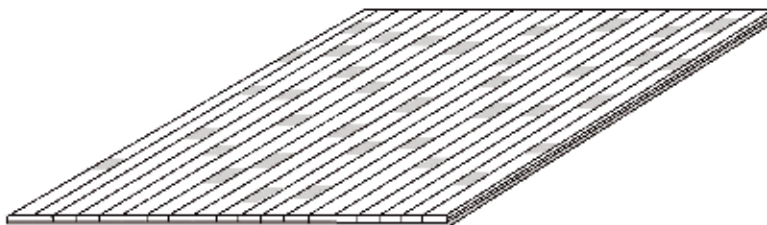

Tile Pandaflex

## Product line

Code Natural	Code Caramel	Style	Strip size (mm)	Finish	Backing	size (cm) (WxL)
TPNL17-50-**	TPCL17-50-**	Panda	2x17	- / L / SL	Latex	ca. 50x50
TPNL17-50-**	TPCL17-50-**	Panda	2x17	- / L / SL	Latex	ca. 50x50
TZNL50-50-**	TZCL50-50-**	Zen	2x50	- / L / SL	Latex	ca. 50x50
TZNL50-50-**	TZCL50-50-**	Zen	2x50	- / L / SL	Latex	ca. 50x50

L = lacquer  
SL = stained lacquered

\*\*\*) The last 2 positions of the product code represent the finish:  
21=unfinished, 22=lacquered. In addition, 14 colours are available:  
01=White, 10=Grey, 11=Black, 12=Elephant, 20=Ceder, 25=Mahony, 65=Blossom, 15=Velvet,  
18=Sahara, 30=Green, 40=Blue, 60=Taupe, 75=Chestnut, 70=Colonial.

## Installation (summary)

**Please read the full installation instructions!**

- The MOSO bamboo tiles have to be fully glued to the sub floor. Follow the instructions of the glue supplier. Suitable glues are dispersion carpet glue (with a low water component) and slip resistant dispersion coatings.
- Determine the middle of the room by drawing a line on the floor, both in length and width, in the middle, at right angles to the wall. This is the starting point for the installation.
- Place (without glue) along these 2 lines a 'test' row. When, at the walls, only a small distance is left, the material can be shifted somewhat, to get a better distribution.
- Apply the glue, according to the instructions of the manufacturer, and install the first 2 rows. Install the tiles as follows: first put one corner of the tile in the correct position and then press the rest of the tile in the glue.
- Now install the rest of the tiles. For the last row: cut the tiles to size, leaving 5 to 10 mm space to the wall. To cut between the bamboo strips, a sharp knife can be used. Use a scissors or saw with a fine blade to cut the bamboo strips.

*This floor type can not be installed on floor heating.*

## Technical characteristics

- Latex: Density: 400 gr./m<sup>2</sup>, Thickness 2mm
- Bamboo: Brinell hardness: 4 kg/mm<sup>2</sup> (Brinell)  
Equilibrium MC: 10% at 20 °C and 65% Rel. Air Humidity  
8% at 20 °C and 50% Rel. Air Humidity  
Density: 700 kg/ m<sup>3</sup>  
Thermal conductivity: λ = 0,17 W / (m·K)

# Installation instruction MOSO® Tile Pandaflex / Zenflex

## Before installation

- To allow acclimatisation, lay your bamboo flooring flat in the room in which it is to be installed for at least 48 hours, in its sealed foil packaging or box, at a room temperature of 18°-20°C (50-65% air humidity).
- Please note that the surface to which the flooring is to be applied must have a minimum temperature of 18°C. The flooring may be installed on any sub floor which is level, without cracks, dry, clean and stable.
- Excessive humidity has a detrimental effect on the flooring. Maximum permitted humidity levels for sub floors are: sand cement 1,8%, chipboard 7-9%, anhydrite floors 0.3%.

## Please note

- Bamboo is a natural product! Therefore variations in colour and structure within a batch are possible.
- Before installation, we advise you to inspect the material for moisture content, size, colour differences and damage. We cannot accept any complaints regarding this once the material has been installed or further processed.
- Installation of the flooring should always be the final job in any building project, in order to avoid damaging the surface. Take care when working with adhesive tape as this could damage the (oil/lacquer) finish.
- Felt pads must be attached to furniture and chairs to avoid damage to the flooring surface.
- All lacquered or stained material should get a first maintenance treatment immediately after installation. Ask your supplier for details.

## Ideal room conditions

- Room temperature approx. 18-20°C; Air humidity 50 - 65%.
- During the winter months, room air can become extremely dry. To maintain a constant air humidity, ceramic humidifiers should be mounted on radiators (or stoves) and, for larger rooms, electric air humidifiers are required. In summer and autumn when air humidity is high, ensure that the room is well-ventilated. Where these conditions are not maintained, warping, shrinkage and movement will occur. Check the air humidity using a hygrometer.

## Installation

- The floor has to be fully glued to the sub floor. Follow the instructions of the glue supplier.
- To glue the material on the sub floor, a dispersion glue with a low water content or slip resistant coating is used. Advantage of slip resistant coating: in case of renovation or repair, the material can easily be torn loose. Dispersion glues can be applied with adhesive comb B1 or B2. Consult your glue supplier.
- Bamboo and wood are natural products which are affected by air humidity. Excessive air humidity causes bamboo material to swell whilst low air humidity results in shrinking. It is of the utmost importance that you maintain the edge distance (expansion gap) from walls, door frames, pipes etc.! This distance should be 5 - 10 mm.
- Determine the middle of the room by drawing a line on the floor, both in length and width, in the middle, at right angles to the wall. This is the starting point for the installation.
- Place (without glue) along these 2 lines a 'test' row. When, at the walls, only a small distance is left, the material can be shifted somewhat, to get a better distribution.
- Apply the glue, according to the instructions of the manufacturer, and install the first 2 rows. Install each tile as follows: first put one corner of the tile in the correct position and then press the rest of the tile in the glue.
- A bamboo strip (one or more) can be placed in between the tiles. Especially when another colour is used, one can create a very playful effect.
- Now install the rest of the tiles. For the last row: cut the tiles to size, leaving 5 to 10 mm space to the wall. To cut between the bamboo strips, a sharp knife can be used. Use a scissors or saw with a fine blade to cut the bamboo strips.

## Floor heating

This floor type can not be installed on floor heating.

## Finish

- The MOSO Bamboo tiles can be either lacquered, oiled, or waxed. For oil: note that bamboo has a dense surface structure, therefore apply oil thinly and allow to dry between applications
- The prefinished bamboo tiles are finished with a transparent- or coloured lacquer. This is a water based acrylate lacquer and satisfies the most recent environmental requirements. All stained bamboo tiles are supplied with an extra coat of lacquer, to better protect the colour.
- In case the bamboo tiles are placed in a 'heavy traffic' area, or in a place with a lot of humidity (for example bath rooms), it is recommended to apply an extra layer of lacquer with the MOSO Transparent lacquer (22). When using other types of lacquer, MOSO can not be held responsible for the result.
- Remove glue residues and other materials from the surface of the installed floor. Clean the floor, using a brush or vacuum cleaner.
- Sand the surface, using sanding grid 230. Clean the surface with a damp cloth.
- Use a roller or a flat brush with soft hairs to apply the lacquer. Follow the instructions from the supplier of the lacquer. If needed, apply another layer of lacquer.

## Maintenance and cleaning

- Sand and dust have the same effect on the surface as sanding paper. Therefore, use a soft brush, vacuum cleaner or special dust remover to keep sand and dust from the floor. At the entrance, use a good quality entrance mat.
- Initial maintenance: The initial maintenance is carried out after installation is complete. Ask your distributor for the correct product and care instructions.
- Cleaning and maintenance: The useful life of your MOSO bamboo tiles will be considerably increased with suitable cleaning and maintenance. Do not use harsh detergents or products containing solvents and/or glycerine. For the lacquered carpet we advise to apply the MOSO Polish at regular intervals. Be sure to follow the care instructions on the packaging. Only use a damp cloth to mop the floor. Do not over-wet.

## Additional note

Whilst all due care is taken to ensure the accuracy of the installation instructions, individual circumstances (location, sub floor and installation procedures) may vary and are beyond the manufacturer's control. In case of doubt, therefore, consult the distributor.

These instructions are subject to change. For the latest version go to [www.moso.eu](http://www.moso.eu).

